

PLUME


Lamps - 1 x 15w E27 LED (not supplied)

Weight - 4.5kg


IP Rating - IP21

Suspension options - Suspension Rod

Custom - Shades made from customer's own material are available on request

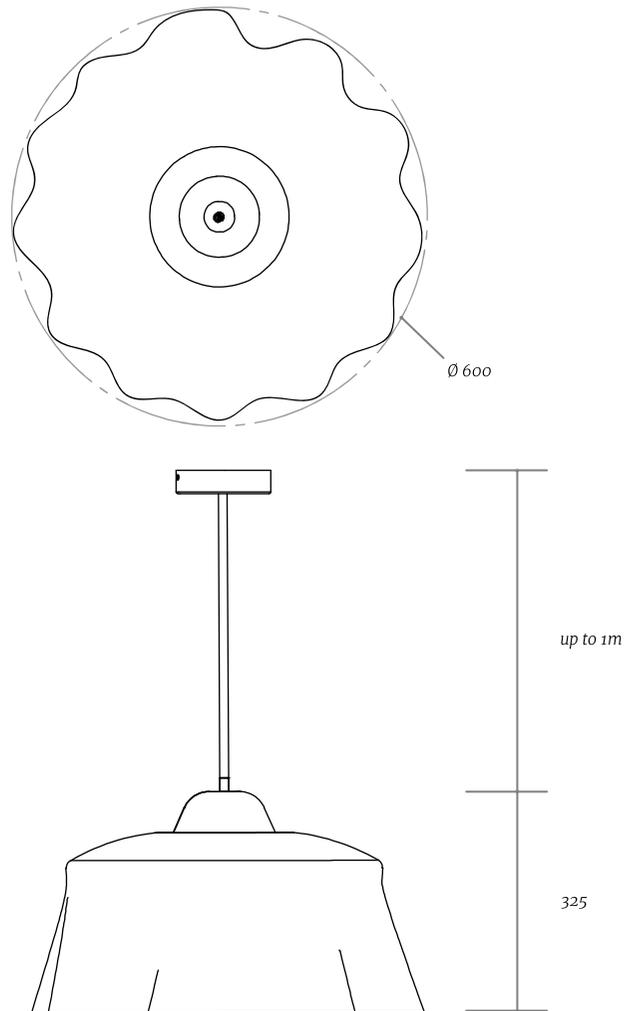


F O S B E R Y
S T U D I O

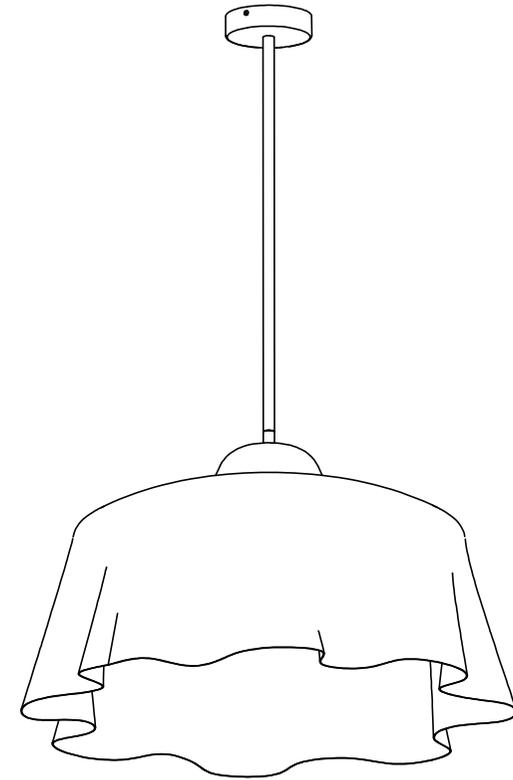


PLUME FITTING INSTRUCTION

Fosbery Studio
26 Guildhall St
Folkestone
CT20 1DZ


CLIPPED TERMINAL BLOCKS ARE INCLUDED, INSTALLATION SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN. ENSURE ALL POWER TO THE AREA IS OFF BEFORE WORKING.

HANDLE WITH CARE TO AVOID DAMAGE TO FINISH. RETAIN ALL PACKAGING UNTIL INSTALLATION IS COMPLETE AND APPROVED.

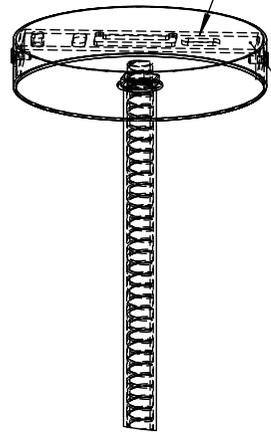

Step 1.
Fix the ceiling strap central to the final position of the light. Ensure the mains cable from the ceiling passes through the middle of the strap for easier connecting.

Step 3.
Offer the ceiling rose up to the ceiling strap and make the mains connection, then cover the ceiling rose over the strap and fix with the supplied fixing screws.

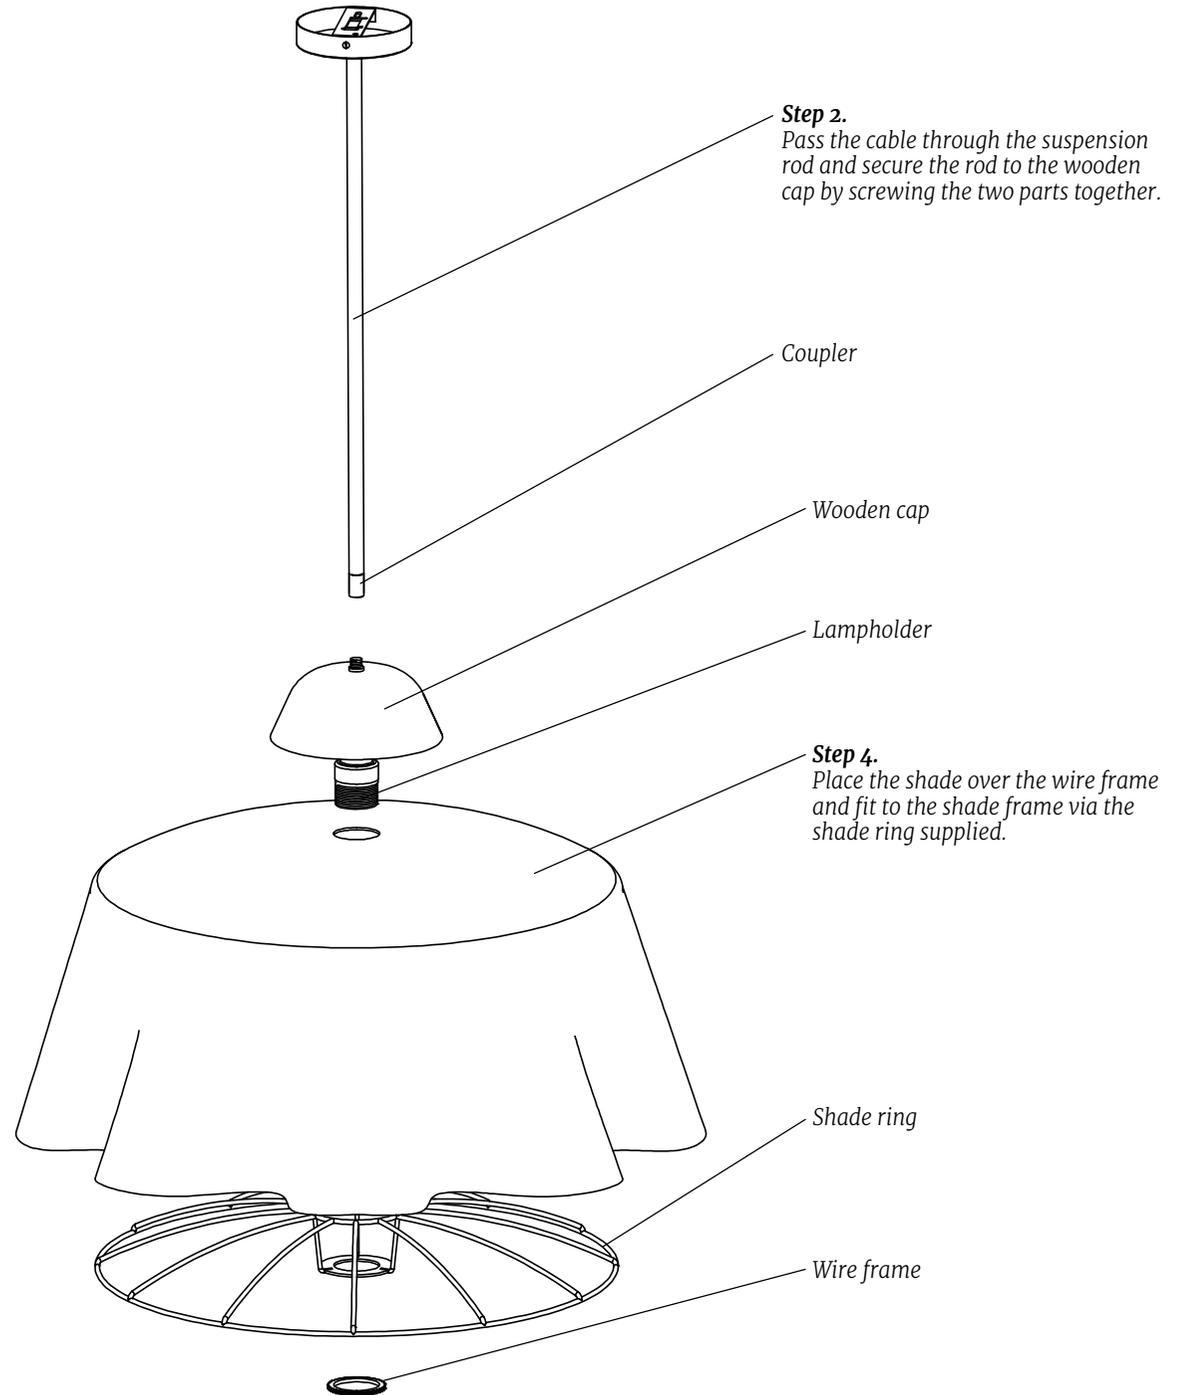

Step 2.
Pass the cable through the suspension rod and secure the rod to the wooden cap by screwing the two parts together.

Coupler

Wooden cap

Lampholder

Step 4.
Place the shade over the wire frame and fit to the shade frame via the shade ring supplied.

Shade ring

Wire frame